

# SERVICE AND WIRING SHEET

26-May-2005 02:17:29

**2313728 REL**



## WARNING

**Electrical Shock Hazard**  
**Disconnect power before servicing.**  
**Replace all parts and panels before operating.**  
**Failure to do so can result in death or electrical shock.**


• Normal operating conditions are viewed when the air and temperature controls are at mid-setting, freezer section 0 to -5°F and unit is cycling.

NOTE: Wall and pressure readings will vary and are influenced by the existing condition of the appliance, such as iced-up evaporator, condition of condenser, defrost cycle, pull-down time and customer use.

### SERVICE INFORMATION ( 2313724 REL )

- REFRIGERANT CHARGE MUST BE APPLIED TO THE HIGH SIDE ONLY.
- THIS UNIT OPERATES AT 120 volts AC EXCEPT FOR CUTTER GRID, ELECTRONIC CONTROLS AND (OPTIONAL) LIGHT WHICH OPERATES AT 8.7 VOLTS.
- THE TRANSFORMER, CUTTER GRID AND ELECTRONIC CONTROL REMAIN ENERGIZED IN ON & CLEAN MODE.

CIRCUIT BOARD JUMPER  
 CUBE THICKNESS

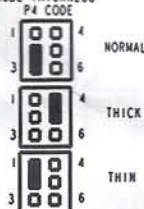


### TYPICAL

ICE PRODUCTION, lbs. 24 hrs

Ambient °F	WATER TEMPERATURE °F			
	50°	60°	70°	80°
100°	37	36	35	34
90°	44	42	40	38
80°	42	40	38	36
70°	44	43	41	40

PERFORMANCE DATA			
TEMPERATURE	SYSTEM PRESSURE AT THE END OF FREEZER CYCLE		CYCLE TIME IN MINUTES
	SUCTION	HEAD	
AMBIENT 70° WATER 60°	1-4	85-80	18-22
AMBIENT 90° WATER 60°	2-5	85-100	21-27
AMBIENT 100° WATER 60°	2-6	85-105	28-35
AMBIENT 70° WATER 80°	1-4	85-80	20-25
AMBIENT 90° WATER 80°	2-5	85-100	23-30
AMBIENT 100° WATER 80°	2-6	85-105	30-38

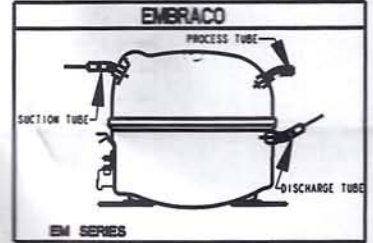

### SERVICEABLE ELECTRICAL PARTS MATRIX

SERVICEABLE PARTS	15" ICEMAKER		WATTAGE		RESISTANCE	
	120V		@120V			
COMPRESSOR	2208370		244			
RUN WINDINGS					1-5	
START WINDINGS					3-11	
RELAY	2217224					
OVERLOAD	2217223					
CIRCULATING PUMP	2208482		26-30		19.6	
WATER VALVE	2185758		12 NOM.		285	
SOLENOID COIL (HGV)	759112		7-9		385	
THERMISTOR BIN	2313633				10k@25°C	
THERMISTOR-ICE CONTROL	2313635				10k@25°C	
PC BOARD	2304016		23			
TRANSFORMER	2185657		40			
CONDENSER FAN MOTOR	2183437		12-15		185	

### ICE BIN THERMISTOR

BIN	CUT-IN		CUT-OUT	
	TEMPERATURE	RESISTANCE	TEMPERATURE	RESISTANCE
	40°F±1°F	25.9kΩ±3%	35°F±1°F	29.8kΩ±3%

### EVAPORATOR THERMISTOR

ICE THICKNESS	CUT-IN		CUT-OUT	
	TEMPERATURE	RESISTANCE	TEMPERATURE	RESISTANCE
NORMAL	52.5°F±0.3°	18.7kΩ±1%	6.5°F±0.3°	69.5kΩ±1%
THICK	52.5°F±0.3°	18.7kΩ±1%	4.5°F±0.3°	73.9kΩ±1%
THIN	52.5°F±0.3°	18.7kΩ±1%	8.5°F±0.3°	65.3kΩ±1%

IF EVAPORATOR THERMISTOR IS NOT PRESENT OR OPEN THEN ELECTRONIC CONTROL WILL CONTINUE TO MAKE ICE BASED ON TIME INSTEAD OF TEMPERATURE. ( 25 MINUTES FOR ICE MAKING AND 4 MINUTES FOR HARVEST )

MINUTES	ON CYCLE				CLEAN CYCLE																						
	POWER ON START UP ONLY	OPERATION			DIAGNOSTICS (SECONDS)						CLEAN CYCLE (MINUTES)																
	2	1	2	1/2	ICE MAKING 15min/25max >6.5°F	HARVEST <6.5°F	ICE BIN FULL <35°F	ICE BIN NOT FULL >41°F	3	5	3	5	5	5	5	5	20	3	3	3	3	3	3	3	3	3	
WATER VALVE																											
CONDENSER FAN																											
HOT GAS SOLENOID																											
RECIRCULATING PUMP																											
COMPRESSOR																											
LED										A	B	C															

• RETURN TO ICE MAKING.  
 PRESS CLEAN SWITCH FOR DIAGNOSTIC MODE.  
 TO EXIT CLEAN/DIAGNOSTIC CYCLE PRESS "OFF" TO RESET CONTROL.  
 A. FLASHES HERE 2 TIMES IF THERE IS A BIN THERMISTOR FAULT.  
 B. FLASHES HERE 5 TIMES IF THERE IS AN EVAPORATOR THERMISTOR FAULT.  
 C. LED WILL PAUSE 3 SECONDS HERE.  
 IN "HARVEST MODE" THE WATER VALVE WILL SHUT OFF AFTER 1 FULL MINUTE. TOTAL TIME IN HARVEST MODE WILL VARY. THE MINIMUM HARVEST MODE IS 1 MINUTE / MAXIMUM IS 16 MINUTES.  
 IN "ICE MAKING MODE" THE FREEZE INTERVAL WILL BE 15 MINUTES MINIMUM TO 25 MINUTES MAXIMUM.

SERVICE AND WIRING SHEET NO.

**2313728 REL**

SERVICE AND WIRING SHEET NO.

**2313728 REL**

